



MACHINE SETTING Menu

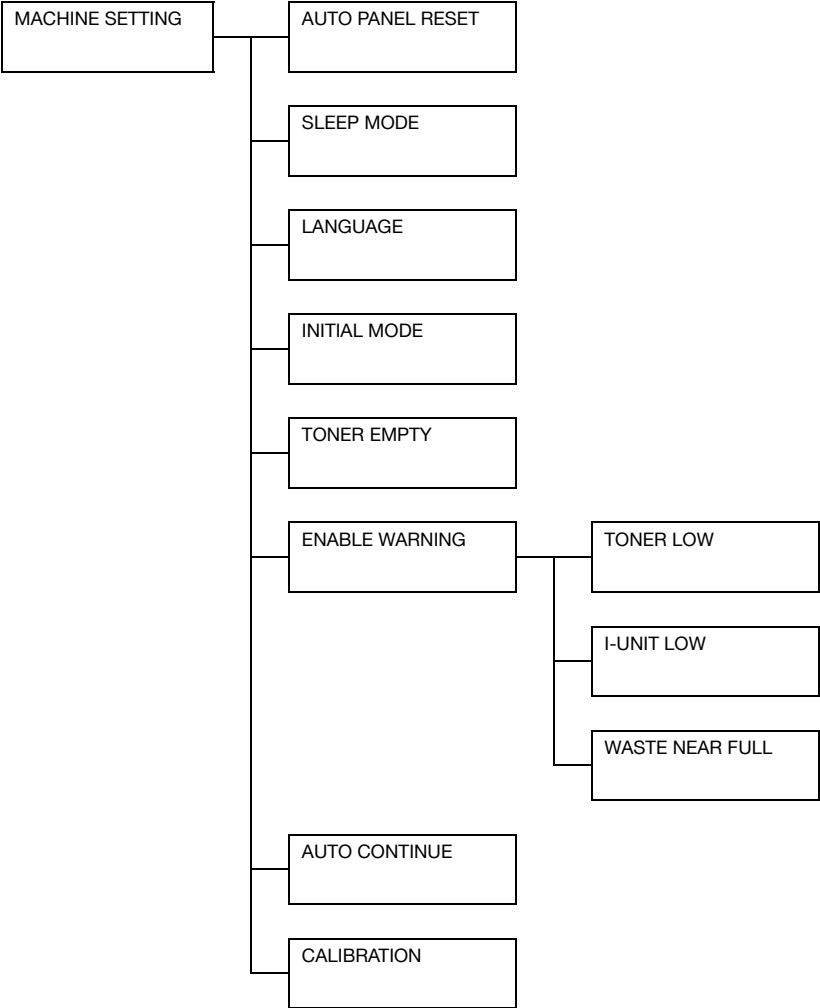



Manufacturer's default settings appear in bold.

| | | |
|--------------------|---|--|
| [AUTO PANEL RESET] | Settings | [OFF] / [30sec] / [1min] / [2min] / [3min] / [4min] / [5min] |
| | <p>Specify the length of time until all settings that have not been programmed, such as the number of copies, are cleared and return to their default settings when no operation is performed.</p> <p>To set the machine to perform the auto panel reset operation, select from 30sec, 1min, 2min, 3min, 4min or 5min for the length of time until the auto panel reset operation is performed.</p> | |
| [SLEEP MODE] | Settings | 3-120 min (Default: 15 min) |
| | <p>Enters Energy Save mode in order to conserve energy when no operation is performed. Specify the length of time in minutes until the machine enters Energy Save mode.</p> | |
| [LANGUAGE] | Settings | [ENGLISH] / [FRENCH] / [GERMAN] / [ITALIAN] / [SPANISH] / [PORTUGUESE] / [RUSSIAN] / [CZECH] / [SLOVAK] / [HUNGARIAN] / [POLISH] / [DUTCH] / [DANISH] / [SWEDISH] / [NORWEGIAN] / [FINNISH] / [TURKISH] / [CATALAN] |
| | <p>Select the language of the menus and messages that appear in the message window.</p> | |
| [INITIAL MODE] | Settings | [COPY] / [FAX] / [SCAN] |
| | <p>Select the mode that the machine starts up in or returns to after the automatic reset.</p> | |
| [TONER EMPTY] | Settings | [STOP] / [BW CONTINUE] |
| | <p>Select whether or not printing, copying and faxing stop when the toner has run out.</p> <p>[STOP]: Printing, copying and faxing stop when the toner has run out.</p> <p>[BW CONTINUE]: Monochrome printing, monochrome copying and fax reception can continue when one or more color toners run out while black toner still remains.</p> | |

| | | | |
|------------------|--|--|--------------|
| [ENABLE WARNING] | [TONER LOW] | Settings | [ON] / [OFF] |
| | | When the toner is nearly run out, a warning message appears. | |
| | [I-UNIT LOW] | Settings | [ON] / [OFF] |
| | | When the imaging unit is nearly run out, warning message appears. | |
| | [WASTE NEAR FULL] | Settings | [ON] / [OFF] |
| | | When the waste toner bottle is nearly full, a warning message appears. | |
| [AUTO CONTINUE] | Settings | [ON] / [OFF] | |
| | Select whether or not printing continues when a size error occurs during printing. | | |
| | <p>[ON]: Printing continues even if a paper size error has occurred.</p> <p>[OFF]: Printing stops if a paper size error has occurred.</p> | | |
| [CALIBRATION] | Settings | [ON] / [OFF] | |
| | <p>Select whether or not to perform image stabilization. If [ON] is selected, image stabilization is started.</p> <p> <i>The Calibration function consumes toner.</i></p> | | |