

## 12. USER SERVICE MODE

### 12.1 List of USER SERVICE MODE

USER SERVICE MODE		
FAX MAINTENANCE	TX SPEED	
	RX SPEED	
	TX LEVEL	
	RX LEVEL	
	DTMF LEVEL	
	CNG LEVEL	
	CED LEVEL	
	ECM MODE	
	CODING SCHEME	
	TONER EMPTY REPORT	
	PROTOCOL REPORT	
	PC FAX TIMEOUT	
	TAD TIME OUT	
	TWAIN TIME OUT	
	SLEEP OFF	
DETECT DIAL TONE		
ADJUST	CIS MAIN ZOOM	
	CIS SUB ZOOM	
	CIS MAIN REGIST	
	CIS SUB REGIST	
	ADF SUB ZOOM	
	ADF MAIN REGIST	
	ADF SUB REGIST	
	FUSER CONTROL	
	TOP ADJ. (FRONT)	PLAIN PAPER
		THICK1
		THICK2
		ENVELOPE
	LEFT ADJ. (FRONT)	TRAY1
		TRAY2
		TRAY3
LEFT ADJ. (BACK)	TRAY1	
	TRAY2	
	TRAY3	

USER SERVICE MODE			
ADJUST	TRANSFER POWER	SIMPLEX PASS	
		DUPLEX PASS	
	IMAGE ADJ PARAM		
	TEMPERATURE		
	ENGINE SW		
	MAI N-SCAN SCALE	MAIN SCAN PAGE	
		SCAN ADJUST VALUE	
	AIDC MODE		
	THICK MODE		
	FINE LINE ADJ		
CRU USAGE	TRANSFER BELT		
	FUSER UNIT		
	TRANSFER ROLLER		
SUPPLIES REPLACE	TRANSFER BELT		
	FUSER UNIT		
	TRANSFER ROLLER		
MAINTEN. MENU	PRINT MENU	EVENT LOG	
		HALFTONE 64	CYAN64
			MAGENTA64
			YELLOW64
			BLACK64
		HALFTONE128	CYAN128
			MAGENTA128
			YELLOW128
			BLACK128
		HALFTONE256	CYAN256
			MAGENTA256
			YELLOW256
			BLACK256
	GRADATION		
IMG ADJ THICK	CYAN		
	MAGENTA		
	YELLOW		
	BLACK		
IMG ADJ BLACK			

## 12.2 Starting/Exiting

### A. Starting procedure

1. Call the UTILITY mode display to the screen.
2. Keep on pressing ◀ key over three seconds.

### B. Exiting procedure

- Press the Stop/Reset key.