Share Magicolor 2300W: Windows XP Professional \rightarrow Windows XP Professional.

Acting as Server: Windows XP Professional. Work station: Windows XP Professional.

Make sure that the users on the work station are known on the server in the user list.

On the server: Install the printer driver, by using the CD Rom, with 'administrator' rights. The printer has to be installed on a LPT port or USB port. After the installation, check if the Windows Test Page is printing correctly. On the work station, install the printer driver, by using the CD Rom, with the normal 'user' rights. Select during the installation \rightarrow Server Install.

1:

Close the status monitor on the server. Select File \rightarrow Exit and do NOT close the status monitor by selecting the "X" in the right top corner of the window.

magicolor 2300W Status Display File Display Printer Help	×
Exit tus: How to Recover:	Printer Status Figure:
Warning Status:	
	Printing Status: Job Name: Page Number:

2:

On the server, printer driver properties, bi-directional support = ENABLED and the Advanced Printing features = DISABLED.

Open the printer driver properties. Select the "Ports" tab. Check if "Enable bidirectional support" is enabled. Select the "Advanced" tab. Check if the "Enable advanced printing features" are disabled.

ど magicolor 23	00W Properties)	? 🛛	💕 ma	agicolor 2300	W Properties		? 🛛
Color Mana	gement	Security	About		Color Manager	ment	Security	About
General	Sharing	Ports	Advanced		General	Sharing	Ports	Advanced
Brint to the follow	ilor 2300W	nts will print to the fi	st free	⊙ ○ Prie	Aļways available Availa <u>b</u> le from prit <u>y</u> : 1	12:00 AM	To	12:00 AM 🛟
Port D	escription	Printer		Drij	ver: magicolor	2300W	~	Ne <u>w</u> Driver
	nter Port nter Port rial Port rial Port rial Port rial Port <u>D</u> elet tional support pooling	QMS-PS 410 v52 e Port <u>C</u>	.4, magicol	 ○ □ □	Spool print docu Start printing Start printing Print directly to th Hold mismatched Print spooled doo Keep printed doo Enable advance Printing Defaults	ments so program after last page is s immediately he printer d documents d documents cuments first cuments d printing features Pri <u>n</u> t Pro	finishes printing fa pooled cessor S	eparat <u>o</u> r Page
		IK Canc	el <u>Apply</u>				K Cano	cel <u>Apply</u>

3:

To give the work stations access to the printer folder, the sharing on the Server needs to be changed.

Select "My Computer" and open the menu: Tools → Folder Options.

Deselect the option: Use Simple File Sharing (recommended).

Folder Options				
General View File Types Offline Files				
Folder views You can apply the view (such as Details or Tiles) that you are using for this folder to all folders. Apply to All Folders Reset All Folders				
Advanced settings:				
Advanced settings: Launch folder windows in a separate process Managing pairs of Web pages and folders Show both parts and manage them individually Show both parts but manage as a single file Remember each folder's view settings Restore previous folder windows at logon Show control Panel in My Computer Show encrypted or compressed NTFS files in color Show pop-up description for folder and desktop items Use simple file sharing (Recommended)				
Restore Defaults				
OK Cancel Apply				

4:

Open the explorer and select the directory: C:\Windows (or WinNT). System32 Spool PRINTERS



Select with your right mouse button the folder PRINTERS and select PROPERTIES.

PRINTERS Properties		? 🔀				
General Sharing Security Cust	omize					
<u>G</u> roup or user names:						
Administrators (WINXP-FL/Administrators)						
CREATOR OWNER						
Power Users (WINXP-FL\Power Users)						
SYSTEM						
🕵 Users (WINXP-FL\Users)						
	Add	Remove				
Permissions for Users	Allow	Denu				
Eull Control						
Full Control						
Modifu						
Modify Bead & Execute						
Modify Read & Execute List Folder Contents						
Modify Read & Execute List Folder Contents Bead						
Modify Read & Execute List Folder Contents Read Write	 					
Modify Read & Execute List Folder Contents Read Write For special permissions or for adva click Advanced.	↓ ✓ ✓ ✓ nced settings,	Adyanced				

Select the "Security" tab and change the permissions for the Users to: Read & Execute \rightarrow Allow. List Folder Contents \rightarrow Allow. Read \rightarrow Allow. Write \rightarrow Allow.

Reboot both PC's (server and workstation).

After the reboot, close the status monitor on the server and print a windows test page from the work station.