
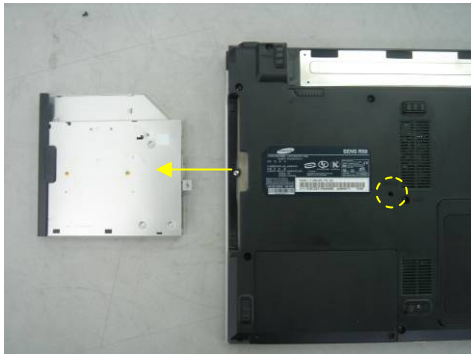
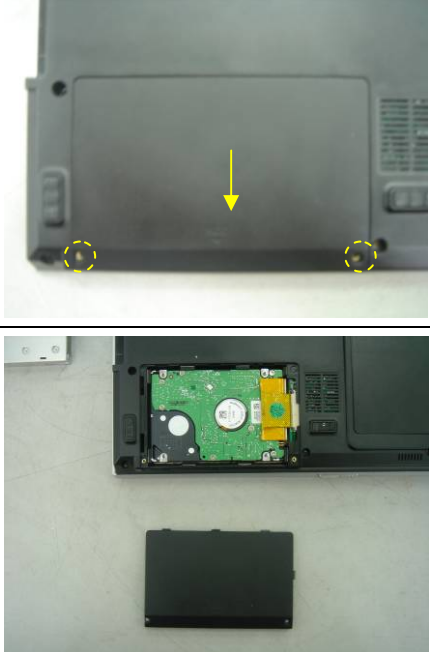


이 문서는 삼성전자의 기술 자산으로 승인자만이 사용할 수 있습니다.
 This Document can not be used without Samsung's authorization.

4. DISASSEMBLE & ASSEMBLE

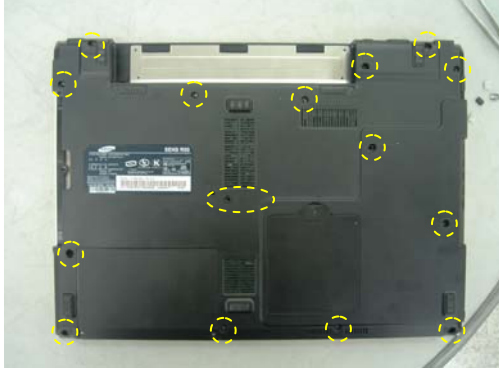



Part	Pictures	Descriptions
BATTERY		<p>(1) Slide both of the latches outwards and pull the battery in the direction of the arrow.</p>
ODD		<p>(1) Loosen the screw and pull the ODD in the direction of the arrow.</p>
HDD		<p>(1) Loosen the 2 screws from the HDD compartment cover and pull the cover in the direction of the arrow to lift the cover up.</p>

4. DISASSEMBLE & ASSEMBLE

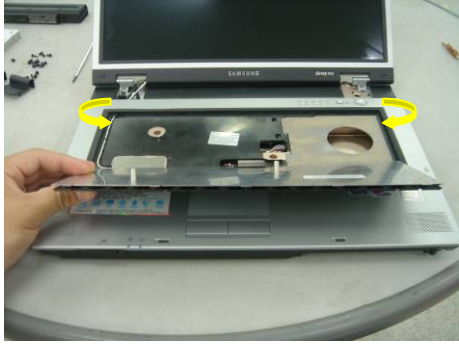
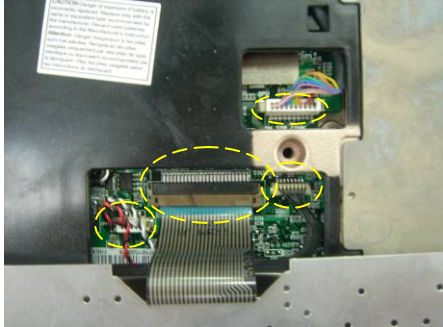


Part	Pictures	Descriptions
HDD		<p>(2) Pull the left and right hooks of the connector forward to lift the HDD.</p>
		
Main System		<p>(1) Insert a screw driver into the groove at the back and lift it up in the direction of the arrow. (Apply this step to both the left and right sides.)</p>
		
		

이 문서는 삼성전자의 기술 자산으로 승인자만이 사용할 수 있습니다.
 This Document can not be used without Samsung's authorization.

4. DISASSEMBLE & ASSEMBLE





Part	Pictures	Descriptions
Main System		(2) Loosen the 15 screws at the bottom of the computer.
		(3) Release the 2 hooks below the keyboard using a screwdriver.
		(4) Lift the keyboard up and slightly pull the keyboard forward. Turn the keyboard over.
		

4. DISASSEMBLE & ASSEMBLE

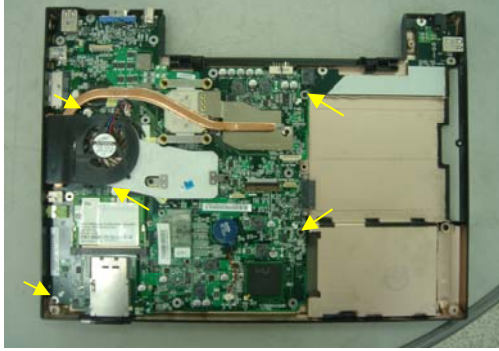
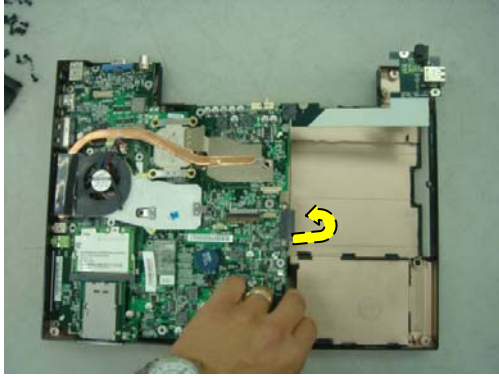
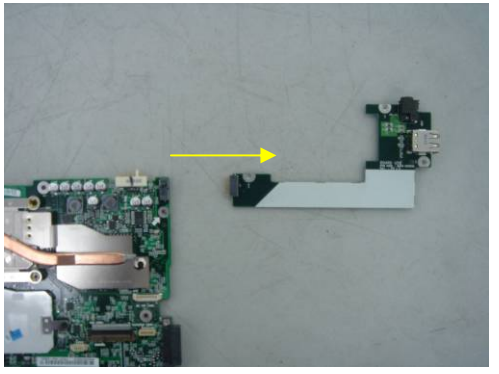

Part	Pictures	Descriptions
		<p>(4) Lift the keyboard up and slightly pull the keyboard forward. Turn the keyboard over.</p>
Main System		<p>(5) Separate all cables.</p>
		
		<p>(6) Remove the cover and pull out the aerial cable.</p>

이 문서는 삼성전자의 기술 자산으로 승인자만이 사용할 수 있습니다.
 This Document can not be used without Samsung's authorization.

4. DISASSEMBLE & ASSEMBLE

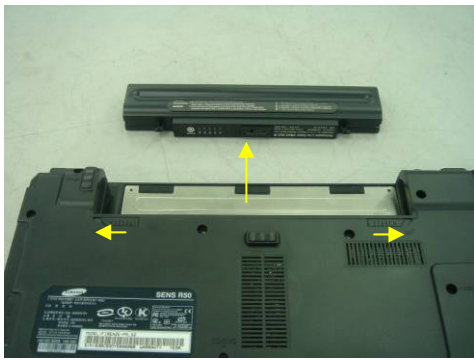



Part	Pictures	Descriptions
Main System		(6) Remove the cover and pull out the aerial cable.
		(7) Loosen the 2 screws and pull the LCD out.
		(8) Loosen the screw and lift the back end of the main board forward slowly.
		

4. DISASSEMBLE & ASSEMBLE





Part	Pictures	Descriptions
Main System		(9) Loosen the five screws.
		(10) Lift the bottom end of the main board slightly to separate the board completely.
USB SUB BOARD		(1) Separate the USB board by pulling the USB board in the direction of the arrow from the disassembled main board.
MINI PCI CARD		(1) Push the hooks in the directions of the two arrows. (2) Pull the Mini PCI in the direction of the arrow.

이 문서는 삼성전자의 기술 자산으로 승인자만이 사용할 수 있습니다.
 This Document can not be used without Samsung's authorization.

4. DISASSEMBLE & ASSEMBLE




Part	Pictures	Descriptions
LCD ASSY		<p>(1) Slide both of the latches outwards and pull the battery in the direction of the arrow.</p>
		<p>(2) Loosen the 4 screws.</p>
		<p>(3) Remove the cover and pull out the aerial cable.</p>
		

4. DISASSEMBLE & ASSEMBLE




Part	Pictures	Descriptions
LCD ASSY		(4) Loosen the 2 screws and pull out the LCD.
		(5) Separate the 5 rubber parts.
		(6) Loosen the screws that were under the rubber parts.
		(7) Lift the LCD panel up slowly from the bottom end with your hand.

이 문서는 삼성전자의 기술 자산으로 승인자만이 사용할 수 있습니다.
 This Document can not be used without Samsung's authorization.

4. DISASSEMBLE & ASSEMBLE

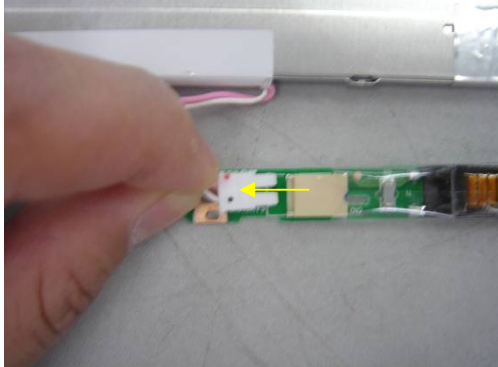
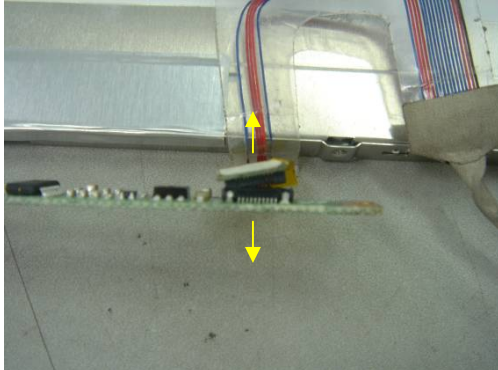

Part	Pictures	Descriptions
LCD ASSY		(8) Loosen the 4 screws.
		(9) Lift the LCD up holding the edge of the LCD with your hand.
		

4. DISASSEMBLE & ASSEMBLE




Part	Pictures	Descriptions
LCD ASSY		(10) Loosen the 8 screws on both sides holding the edge of the LCD.
		
		(11) Separate the bracket and turn the LCD over.

이 문서는 삼성전자의 기술 자산으로 승인자만이 사용할 수 있습니다.
 This Document can not be used without Samsung's authorization.

4. DISASSEMBLE & ASSEMBLE

Part	Pictures	Descriptions
		<p>(12) Pull the end of the cable on the lower part in the direction of the arrow to separate the cable from the inverter board.</p>
LCD ASSY		<p>(13) Separate the LCD cable from the inverter board by pulling each of them in the direction of the respective arrows.</p>
		<p>(14) Pull the LCD cable in the direction of the arrow to separate it from the LCD.</p>

4. DISASSEMBLE & ASSEMBLE

Part	Pictures	Descriptions
		<p>(1) Loosen the screw on the memory compartment cover and remove the cover.</p>
MEMORY		<p>(2) Pull the hooks outward.</p>
		<p>(3) Separate the memory card by holding one side of the card.</p>