

Service Manual



Laser Printer

ML-1910/1915

ML-2525/2525W/2580N

1. Speed

- ML- 2525/2525W/2580N : 24 ppm in A4
- ML- 1910/1915 : 18 ppm in A4

2. Processor

- Jupiter4e 150 Mhz
- Chorus3 360 Mhz (Only 2525W, 2580N)

3. Printer Language Emulations

- SPL, PCL6 (Only 2580N)

4. Memory

- 8 MB / 64 MB (Only 2525W, 2580N)

5. Interfaces

- One USB port
- One 10/100 BaseT network connector (2580N)
- One IEEE 802.11 b/g wireless LAN (2525W)

6. Toner cartridge

- Initial : 0.7K (1910/ 1915) / 1K (2525/2525W/2580N)
- Sales : 1.5K / 2.5K two types



ELECTRONICS

Service Manual

Service Manual

GSPN (Global Service Partner Network)

North America : service.samsungportal.com

Latin America : latin.samsungportal.com

CIS : cis.samsungportal.com

Europe : europe.samsungportal.com

China : china.samsungportal.com

Asia : asia.samsungportal.com

Mideast & Africa : mea.samsungportal.com

© Samsung Electronics Co.,Ltd. February. 2008
Printed in Korea.

VERSION NO. : 1.00 CODE : 2580-00000E

chapter 1 *Precautions*

1.1 Safety Warning	1-1
1.2 Caution for safety	1-2
1.2.1 Toxic material	1-2
1.2.2 Electric Shock and Fire Safety Precautions	1-2
1.2.3 Handling Precautions	1-3
1.2.4 Assembly / Disassembly Precautions	1-3
1.2.5 Disregarding this warning may cause bodily injury	1-4
1.3 ESD Precautions	1-5

chapter 2 *Product Overview*

2.1 Product Specifications	2-1
2.1.1 Product Overview	2-1
2.1.2 Specifications.....	2-2
2.1.3 Model Comparison Table	2-9
2.2 System Overview	2-10
2.2.1 Front View	2-10
2.2.2 Rear View	2-11
2.2.3 System Layout	2-12
2.2.4 Engine H/W Specifications	2-19
2.2.5 Engine F/W Control Algorithm	2-27
2.2.6 S/W Descriptions	2-29

chapter 3 *Maintenance and Disassembly*

3.1 Precautions when replacing parts	3-1
3.1.1 Precautions when assembling and disassembling	3-1
3.1.2 Precautions when handling PBA	3-1
3.1.3 Releasing Plastic Latches	3-1

3.2 Screws used in the printer	3-2
3.3 Cover	3-3
3.3.1 Front Cover	3-3
3.3.2 Top Cover	3-3
3.3.3 Rear Cover	3-4
3.3.4 Right Cover	3-5
3.3.5 Left Cover	3-6
3.4 Fuser Unit	3-7
3.4.1 Whole Fuser Unit	3-7
3.4.2 Main Service parts of Fuser Unit	3-8
3.4.3 Replacing the Main Service part of Fuser Unit.....	3-10
3.5 LSU Unit.....	3-18
3.6 OPE PBA	3-19
3.7 Drive Unit	3-19
3.8 FAN.....	3-20
3.9 Transfer Roller	3-21
3.10 Main PBA and SMPS/HVPS board	3-22
3.11 Pick up roller	3-25
3.12 Cassette holder pad	3-26

chapter 4 *Alignment and Troubleshooting*

4.1 Alignment and Adjustments.....	4-1
4.1.1 Control Panel.....	4-1
4.1.2 Understanding the LEDs	4-2
4.1.3 JAM Removal	4-3
4.1.4 Printing a report.....	4-6
4.1.5 Periodic Defective Image.....	4-10
4.1.6 How to use DCU	4-11
4.1.7 EDC Mode	4-16
4.1.8 Firmware upgrade.....	4-19
4.1.9 Using the smart panel program	4-20
4.2 Troubleshooting.....	4-22

4.2.1 Procedure of Checking the Symptoms	4-22
4.2.2 Bad discharge	4-25
4.2.3 Malfunction.....	4-30
4.2.4 Bad image	4-36
4.2.5 Network problems and solutions (Only ML-2580N).....	4-52
4.2.6 Fuser Problems and solutions	4-54

chapter 5 System Diagram

5.1 Block Diagram	5-1
5.2 Connection Diagram.....	5-4

chapter 6 Reference Information

6.1 Tool for Troubleshooting	6-1
6.2 Acronyms and Abbreviations	6-2
6.2.1 Acronyms	6-2
6.2.2 Service Parts	6-4
6.3 A4 ISO 19798 Standard Pattern.....	6-8
6.3.1 A4 ISO 19752 Standard Pattern	6-8
6.4 Selecting a location	6-9

attached Exploded Views & Parts List

* Please see the attached.

Power Cord	2
Thumbnail	3
1. Main	4
2. Top Cover.....	6
3. Cover	8

Contents

4. Front Cover	10
5. Rear Cover	12
6. Main Frame	14
7. Main Drive Bracket (ML-1910)	18
8. Main Drive Bracket (ML-2580N)	20
9. Base Frame-Pick Up	22
10. Fuser	24
11. Cassette	26