Trail Camera

Model: WiFi301











120°



Bluetooth

SPECIFICATIONS

Photo recording

Photo resolution	24MP / 20MP / 16MP / 12MP	
File format	.JPG	
Time lapse mode	5min / 10min / 30min / 60min	
Multi-shot mode	Up to 9 photos per detection	
Stamp (photos and video)	Date, time, temperature (°C /°F)and moon phase Camera/Video/Camera&	
Capture mode	video/Time lapse	

Video recording

Video resolution	1296p / 1080P / 720P / WVGA(480P)
File format	.MP4 / H.264
Video length	10s / 30s / 60s / 90s
Capture mode	Colorful mode at daytime,
· · ·	black and white mode at night

WiFi / APP / Bluetooth

Scan QR code to Download

Bluetooth W

WiFi On / Off

WIFI Vision Distance 50M

Bluetooth Connection Distance 5M



App (IOS) WiFiCameraSum



App (Android) WiFiCamera

Memory storage

Support

- Internal memory: none
- External memory: Micro SD card
- (up to 64GB, Not included)

Viewing	
Built-in screen	TFT 2.0"
Power source	
Alkaline Battery	1.5V AA Battery*4
Lithium Battery	Rechargeable lithium AA battery
External Power Jack	DC 6V 1A (3.5x1.3mm)
Detection system	
Motion Sensor	1 x PIR
Detection Angle	120°
Detection Range	Adjustable from 1 to 98 Ft
T' O I	0.2 second
Trigger Speed	

Infrat LEDs	2pcs LEDs
Flash Range	< 98 Ft
Exposure	Auto / 100 / 200 / 400

Optical field of view

120°

Dimensions

13cm x 11.4cm x 8.4cm

Recommendations

Operating temperature

(-4°Fto + 158°F) (-20°C to + 70°C)

Waterproof level

IP 66








Battery Compartment



USB Port

INSTALLATION

1

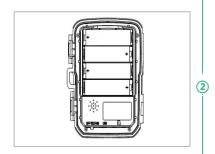

Step 1

Open the battery cover and insert 4 batteries(AA) following to the positive and the negative battery sign.

Close the battery cover to resist water and dust.

Be Sure to put AA batteries in the correct direction. Inserting batteries incorrectly will cause permanent damage.

3





1 Slide the mode switch form OFF to TEST to activate the camera and view the user

2 And then slide the mode switch form **TEST** to **ON**.

3 The camera will start working after 10 seconds countdown, meanwhile the red indicator light will blink.



Scan the QR codes below or search for "WiFiCameraSum" on the Apple appstore or search for "WiFiCamera" on the Google Play to download the app.



IOS

Step 5



Open the APP on your cellphone and tap "Search Device" at the left lower corner



Android




2 select "GCBT40" and then tap "Connect" to connect your phone and camera with Bluetooth. You can see the camera flashing whitred light one time and then flashing blue light. On the other hand, you can choose another way to turn on WiFi

- 1. Open Trail Camera
- 2. Press the OK Button on control panel Your OK will turn on





Step 6

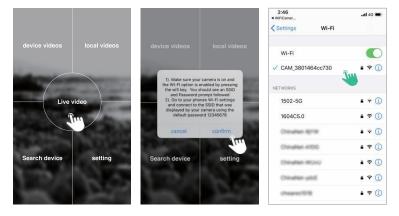

- Back to the main page of app and then tap "Live video".
- Enter password "12345678". (WiFi name and password can be changed in the APP when connected)











EXTERNALPOWERSUPPLY Use 6V DC Power source (Not included)



 
OPERATING BUTTON





MENU Menu Button -- Menu Setting

PLAY Replay Button -- Replay Mode



Camera Button -- Photo Mode

Shot Button -- Start/End Video Recording or Photo Taking

WiFi Button: ON/OFF WiFi OK

SETUP MENU



Setup	Sub Menu	Description
Mode	Camera,video,camera &video,Timelapse	Picture,video,picture and video,taking piture regular
Resolution	1296P, 1080P, 720P, WVGA(480P)	Video Resolution
Video Length	10/30/60/90 Seconds	Each Video max 90 sec, default 10sec
Record Audio	On / Off	Video With Sound



Setup	Sub Menu	Description
Image Size	24P/20MP/16MP/12MP	Image resolution
Interval	1/5/10/30sec,1/5/10/30min	Max 30 minutes delay
Time Lapse	5/10/30/60 minutes	Take pic every 5min
Sequcence	1/3/6/9 pictures	Max 9 pics one shot
ISO	Auto/100/200/400	Exposure level
Over write	On / Off	Cycle Recording
PIR Sensitivity	High/Medium/Low	Adjust PIR sensitivity
Language	UK/FR/ES/RU/POR/IT/DE	Adjust PIR sensitivity
Frequency	50HZ / 60HZ	Screen refresh rate
Camera ID	CAM000	6 numbers or letters
TV Mode	NTSL , PAL	Camera support AV-out
Password	On / Off	4 numbers
Working Timer	00:00:00 to 23:59:59	N/L
Date / Time	DD/MM/YY	N/L
Format	OK / Cancel	Format memory card
Default Setting	OK / Cancel	Back to default

In The box



TROUBLESHOOTING

Q: What is the range of WiFi and Bluetooth?

A: The range of camera WiFi is about 98Ft at forest or indoor and 328Ft at open space. The range of camera Bluetooth is between 16 to 26 Ft.

Q: If the camera is in range, can you connect to Bluetooth?

A: WiFi301 WiFi Bluetooth trail camera connects with the phone's WiFi.Download the APP on your phone and then connect with WIFI. You can adjust the setting and check the photo /video on the phone directly. This trail camera is not a webcam, APP control has range limits

Q: Does it have a connection to be wired for 6vdc or 12vdc instead of battery?

A: Yes, you can use 6vdc for this camera, there is a power connector in the box, dedicated to the external power supply.

Recommend using 4*1.5V AA batteries in this trail camera to obtain maximum battery life.(NOT INCLUDED)

Q: Can you change WiFi name and password of the camera?

A: Yes, you can change different WiFi name and your own password by app on phone.

Q: Can you connect to your in-home WiFi and the internet provided the camera

A: WiFi301 trail camera connects with the phone's WiFi, not in-home WiFi/Internet. Download the APP on your phone and then connect with WiFi. You can adjust the setting and check the photo /video on the phone directly.

Q: Is the app available for iPhone?

A: Yes, Trail Camera use "WiFiCameraSum" APP for Apple Store and "WiFiCamera" APP for Google Play, it's available for Android and IOS system phone.